

OPTIONAL CAMERA USAGE

THE DVR-W4 AND DVR-W4I HAVE THE CAPABILITY OF USING EITHER WIRELESS CAMERAS OR WIRED CAMERAS DEPENDING ON THE DESIRED USAGE.

You can use any combination of wired or wireless cameras such as channels 1 & 2 wireless and channels 3 & 4 wired.



TO OPERATE WIRED CAMERAS CHOOSE THE CAMERA YOU WISH AND CONNECT TO BNC CONNECTOR ON BACK OF DVR.

TO CHOOSE OPERATION OF WIRED CAMERA PUSH THE BUTTONS AT THE LOWER HALF OF REMOTE CONTROL. YOU WILL SEE 1,2,3,4, AND A/B. 1,2,3,4 WILL CHANGE WIRELESS TO WIRED ONE AT A TIME OR A/B WILL CHANGE ALL FOUR AT ONCE.

